







LED Headlight Kit Installation Additional Information

Kits sold by M4Products.com

- LED Headlights install in the socket the same as the original headlight, consult your vehicle owners or shop manual on headlight replacement procedures. Due to many vehicle differences, we do not provide vehicle specific installation instructions.
- Black Heatsink on back of LED must be in open air. It can be reversed for better fit if necessary
- Driver box can be affixed to clean solid surface with double sided tape, or hung from the vehicle harness with zip ties.
- Ensure driver electrical connections are screwed in completely to keep water out of connection.
- Ensure a good clean tight connection to the vehicle harness. Tape or zip tie if necessary to hold the connection tight. This is the most common issue with installation trouble.
- In most cases there is no alignment necessary as the LED sits in the same location as the original bulb in your factory housing. If necessary, your housing can be adjusted per your vehicle manufactures recommended procedure. Some models of LED are also adjustable for position with click turns, or by loosening the collar with a hex key and repositioning.
- In general, when installed, the LEDs will point out the side of the light. If the LED has a protrusion near the LEDs to block some low beam light, the protrusion will be above LED.
- In general, proper light alignment is for the headlights to point slightly to the right, and lower on the left side of the road, this keeps the lights out of the eyes of oncoming drivers.
- Keep one of your stock bulbs as a spare in the event of a failure as a replacement module will take more time to procure.

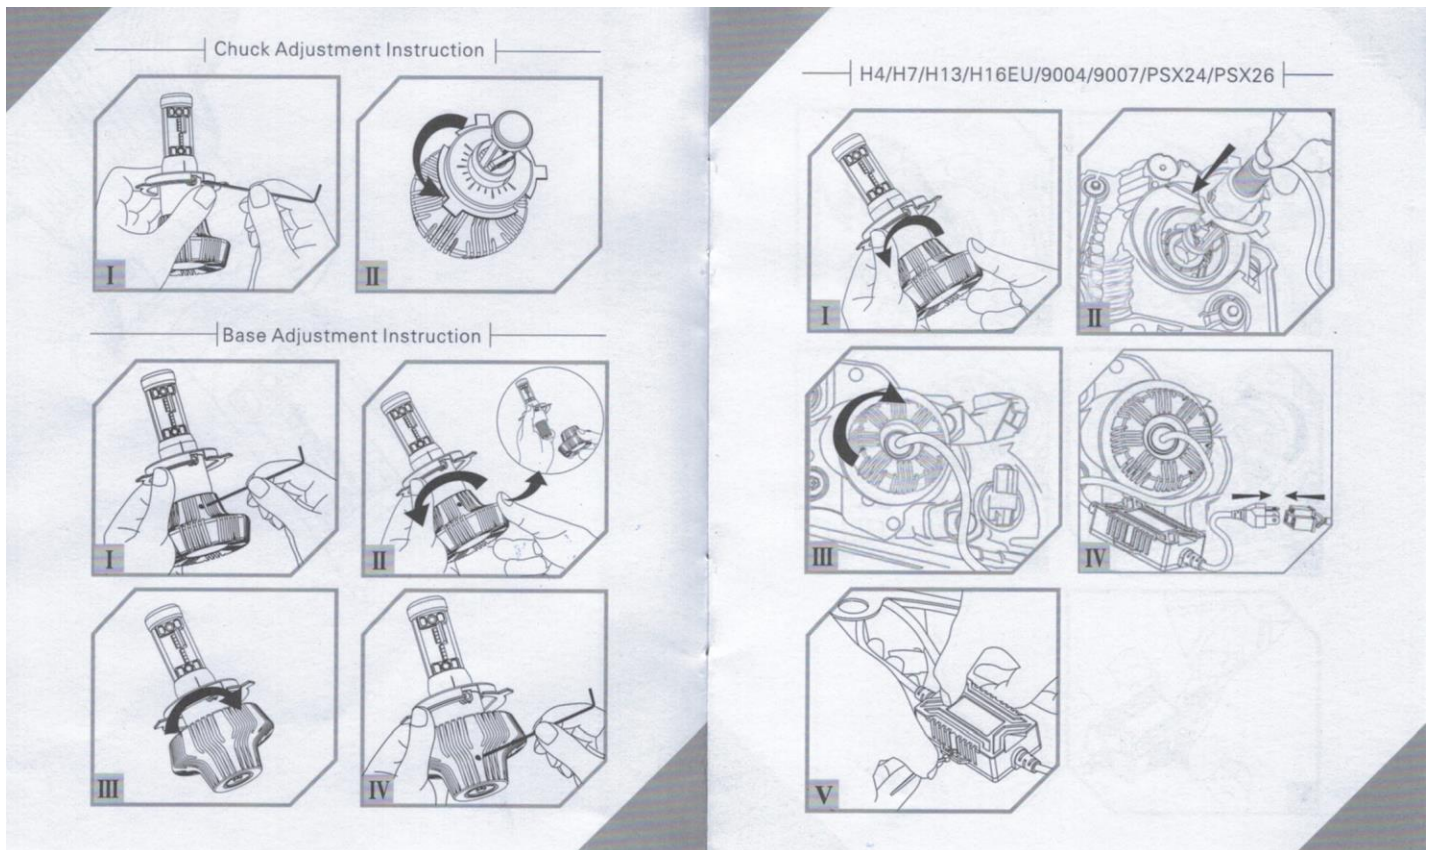

|H10/9005/9006|

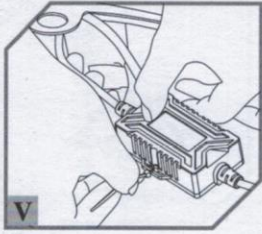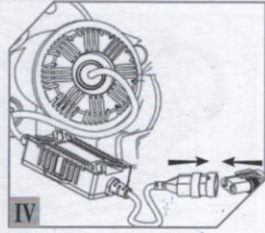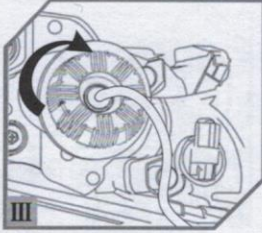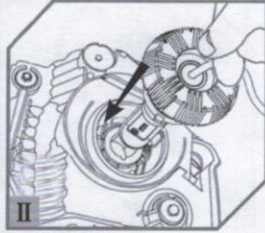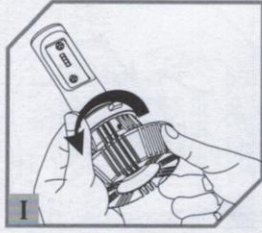

|H8/H9/H11/H16JP/P13|

